

## Fisherbrand™ Standing Rest


### Best Support for Seating, Standing and and Combination Workstations

The Standing Rest is a real all-rounder. It is the practical solution for workstations where staff both sit and stand. To meet this requirement, the Standing Rest can be continuously adjusted over an extra large range of heights. Its ergonomic backrest and non-slip grooved seating surface ensure that you feel completely secure and comfortable when seated.



#### Standing Rest at a Glance

- Ergonomic backrest
- Adjustable seat height
- Non-slip grooved surface
- Seating surface can be rotated 360°
- Chrome-plated foot ring with adjustable height
- On glides

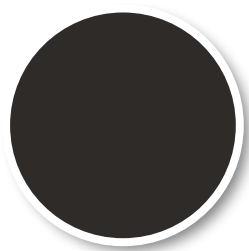

#### Cover Material: Integral Foam (PU)

- Color: Black
- Extremely robust and durable
- Washable
- Resistant to disinfectants
- Resistant to weak acids and alkalis

Guarantee

10

Years

## Fisherbrand™ Standing Rest

Cat. No. **17776689**

Dimensions	Seat	H 510-780 mm W 640 mm D 300 mm
Packing data	Weight:	13 kg
	Volume:	0.15 m <sup>3</sup>



Basic Equipment		Benefit
Seat	Slip-resistant seat with rippled surface  Polyurethane foam (PU): The new developed SoftTouch polyurethane foam provides the ultimate softness in seating, is washable and resistant to external influences. Colour: Black	Very good support of the lumbar region.  The use of polyurethane foam is recommended for work environments where the chair is in contact with aggressive substances and sharp parts.
Seat height	Stepless seat height setting from 510–780 mm supported by safety gas spring with protective cover	Seat height can be adapted to nearly 95% of all body sizes, the cover protects the gas spring from dust and dirt.
Technology	360° rotation of the seat	Maximum freedom of movement.
Base	Polished 5 star aluminium base	Very high stability, longevity and safety flat design prevents stumbling hazard.
Glides	Glides provided as standard	Offer a superb level of stability. Blocks the chair when seated. Easily movable when there is no pressure on the chair.
Foot ring	Height adjustable, chrome-plated foot ring	Wide foot plate provides good support. Height can be quickly and easily adjusted.
Standards	DIN 68 877 GS certificate for "tested safety" DIN EN ISO 9001 quality management DIN EN ISO 14001 environmental management EMAS tested environmental management OHSAS 18001 occupational health and safety management EcoVadis CSR rating 2015 Gold	Verified by certificates from independent testing institutes, quality, environmental friendliness and procurement security.
Guarantee	10-year long-term-guarantee	Free shipping for spare parts during the whole period of validity.

Visit [eu.fishersci.com](https://eu.fishersci.com) for more information

Distributed by Fisher Scientific. Contact us today:

**Austria:** fishersci.at **Belgium:** fishersci.be **Denmark:** fishersci.dk  
**Germany:** fishersci.de **Ireland:** fishersci.ie **Italy:** fishersci.it  
**Finland:** fishersci.fi **France:** fishersci.fr **Netherlands:** fishersci.nl  
**Norway:** fishersci.no **Portugal:** fishersci.pt **Spain:** fishersci.es  
**Sweden:** fishersci.se **Switzerland:** fishersci.ch **UK:** fishersci.co.uk

